



USB as default since REV. D
 If an external serial interface (e.g. MAX232) is attached to P7, JP1's connection must be cut on PCB's solder side.
 The FT232RL may later be re-enabled by installing a jumper at P7 1-3, if the external interface is removed.

Thomas Winkler, http://xs1541.t-winkler.net/		Nils Eilers, http://home.germany.net/nils.eilers/xs1541/	
File: xs1541.sch		Sheet: /	
Title: XS-1541			
Size: A4	Date: 6 may 2009	Rev: D	
KiCad E.D.A.		Id: 1/1	